

Blue Connect Overhead Installation Pod



FIGURE 1

2) PLACE 2 STRIPS OF VELCRO TAPE TO THE NON STICKER SIDE OF THE CONTROL MODULE. [SEE FIG. 2]



FIGURE 2



FIGURE 3

3) SECURE THE CONTROL MODULE TO THE INSTALLATION POD BY USING THE VELCRO SIDE. BUNDLE THE CABLES SO THAT IT STAYS INSIDE THE POD AREA, EXCEPT FOR THE POWER / GROUND CABLES. [SEE FIG. 3]

4) MAKE A CUT/SLIT IN THE VEHICLE HEADLINER. BE SURE THE CUT IS NOT LONGER THAN THE SHORTEST SIDE OF THE MOUNTING PLATE. INSERT THE MOUNTING PLATE THROUGH THE SLIT AND OVER THE HEADLINER. USE (2) SHORT SCREWS AND SECURE THE PLATE TO THE HEADLINER. [SEE FIG. 4]

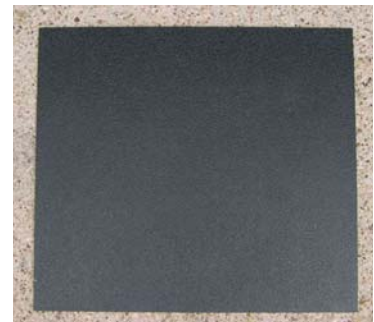


FIGURE 4



FIGURE 5

5) PLACE THE MOUNT BRACE TO THE HEADLINER AT THE SAME LOCATION WHERE THE MOUNTING PLATE WAS PREVIOUSLY INSTALLED. INSERT THE POWER / GROUND CABLES THROUGH THE HOLE IN THE MOUNT BRACE. WITH THE MOUNT BRACE RIGHT UNDER THE MOUNTING PLATE THE HEADLINER, USE (4) SCREWS TO SECURE IT TO THE MOUNT PLATE. [SEE FIG. 5]

6) RAISE THE OVERHEAD POD ASSEMBLY TO THE MOUNT BRACE AND PUSH UPWARD. THIS WILL ALLOW THE TREE CLIPS TO SECURE THE OVERHEAD POD ASSEMBLY TO THE MOUNT BRACE.