

# Ford F150 (Rail System)


## Overhead Console Installation



(FIGURE 1)

1) ALIGN AND POSITION THE SUPPLIED OVERHEAD CONSOLE TO THE FACTORY RAIL SYSTEM. POSITION THE CONSOLE IN A MANNER THAT ALL GAPS TO THE HEADLINER ARE CLOSED. [SEE FIG. 1]

2) USING THE SUPPLIED SELF PIERCING SCREWS, SECURE THE OVERHEAD CONSOLE TO THE RAIL SYSTEM. (SOME OVERHEAD CONSOLES WILL REQUIRE MORE SCREWS THAN OTHERS) [SEE FIG. 2]

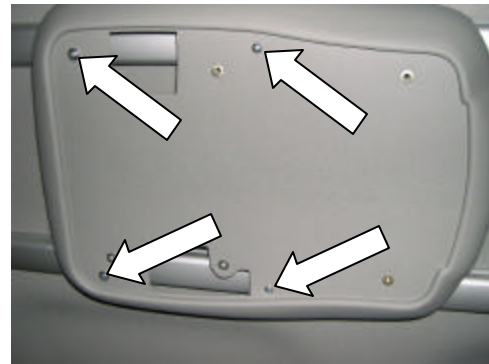

(FIGURE 2)



(FIGURE 3)

3) UP TO THIS POINT, YOUR INSTALLATION SHOULD LOOK LIKE **FIGURE 3**.

4) USING THE SUPPLIED BLACK ZINC SCREWS, SECURE THE FLIP DOWN SYSTEM TO THE INSTALLED OVERHEAD CONSOLE. [SEE FIG. 4]



(FIGURE 4)